


1 Parts identification

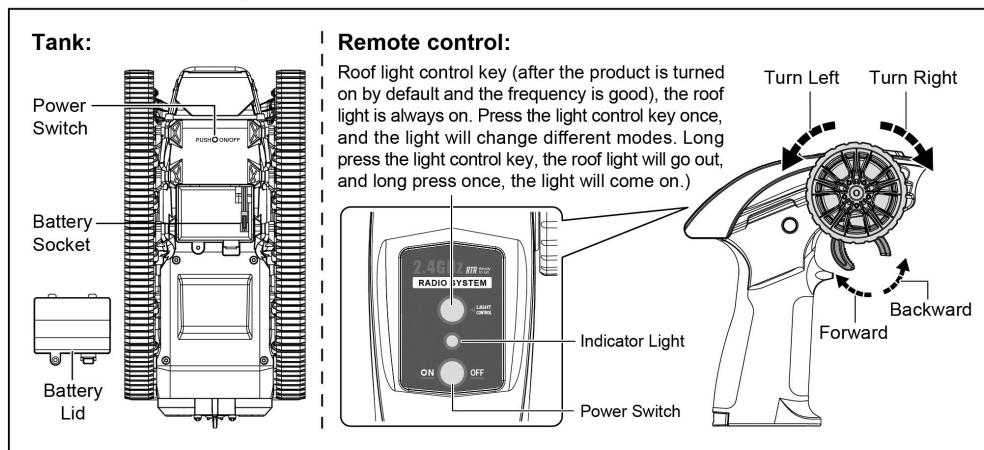


2 Battery charging and assembly


1. USB charging cable charging method

As shown in the picture, insert the USB charging cable to the USB port of the computer or mobile phone charger so that the red USB indicator light is kept on. Then connect the USB charging cable to the battery pack as shown in the picture so that the green USB indicator light flashes slowly, indicating that it is charging. About 180 minutes later, the green indicator light is kept on, indicating that the charging is completed.

Notice: Please use the correct adapter for charging
Input: 100-240V~50/60Hz 0.2A;
Export: 5.0V --- 2A

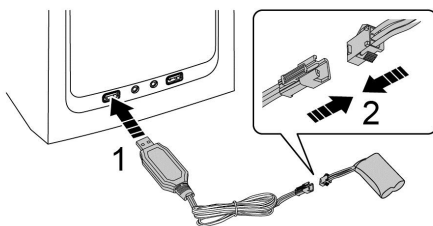


2. Use a screwdriver to turn the screw on the battery cover at the bottom of the tank counterclockwise, open the battery cover, assemble the battery into the battery slot with the correct electrode, cover the battery cover, and tighten the screws. (As shown in the figure)

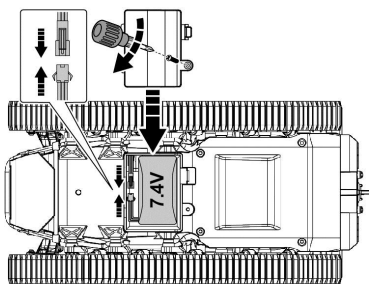

3. Installation method of remote control battery (as shown in the figure):

- Unscrew the screw counterclockwise with a screwdriver to open the battery cover.
- Install two 1.5V "AA" alkaline batteries (to be purchased separately) and pay attention to whether the positive and negative electrodes of the battery are installed correctly.
- Close the battery cover and tighten the screws clockwise with a screwdriver.

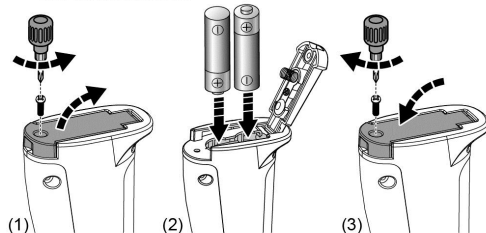

3 Control methods


Frequency matching operation: first, press the power switch of the remote control lightly for about 0.5 seconds to turn on the power, at this time, the power indicator of the remote control flashes, then press the power switch of the car lightly for about 0.5 seconds to turn on the power, the car and the remote control start frequency matching, at the same time, the indicator of the remote control and the body indicator turn from flashing to normally on, and then the frequency matching is successful. (Note: before turning on the power supply of the remote control, the body indicator flashes to the frequency matching mode.)

Control range: The control range of the remote control tank is about 50 meters. Please avoid to overstep this control range, otherwise the remote control tank will be out of control.


Play time: On a full charge conditions, the remote control tank could be used for about 15 minutes.

Low battery status: when the battery under the car is running low, all lights will flash to remind (at the same time, the speed of the car will obviously slow down). After running for about 1 minute, the car is completely dead (the car stops). When the battery power of the remote control is low, the light flashes slowly (it can still be controlled) until the light goes out, and the remote control cannot be controlled.


1. Pull the throttle trigger backward and the tank will move forward.

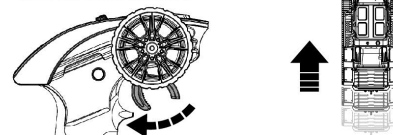


2. Push the throttle trigger forward and the tank will move backward.

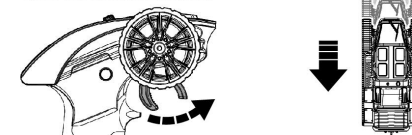


3. Pull the trigger backward and turn the steering wheel to the left, then the tank will turn left while moving forward.

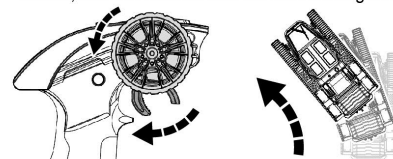


4. Pull the trigger backward and turn the steering wheel to the right, then the tank will turn right while moving forward.

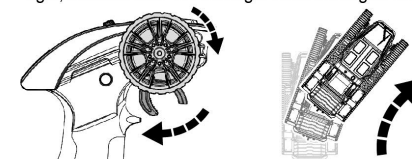


5. Push the trigger forward and turn the steering wheel to the left, the tank will turn left while moving backward.

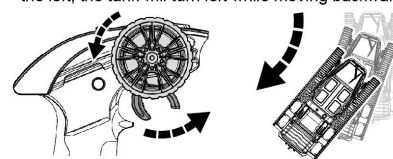


6. Push the trigger forward and turn the steering wheel to the right, the tank will turn right while moving backward.

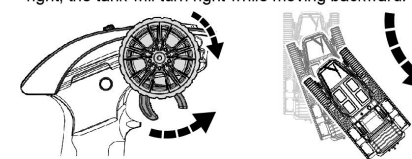

7. Turn the steering wheel to the left, so that the tank rotates 360° to the left on the spot.

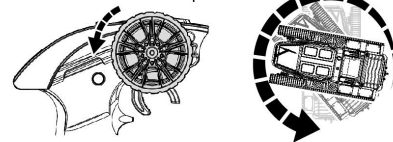


8. Turn the steering wheel to the Right, so that the tank rotates 360° to the Right on the spot.

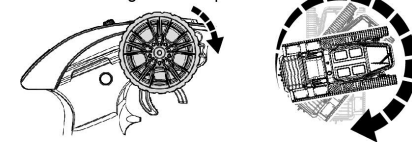

Notes:

 Do not put hands into the wheels or the caterpillars.



Do not put the hands into the wheels or the caterpillars to avoid hurts. Do not touch the wheels or the caterpillars when holding the tank to avoid hurts by misoperation.

- Charge batteries should be used for the product and two 1.5V "AA" batteries should be used for the remote control;
- Please pay extra attention to the polarities during installation or change of batteries;
- Do not recharge any non-rechargeable batteries;
- Adult's supervision and protection is required when recharging the chargeable batteries;

- Remove the rechargeable batteries before charging;
- Do not use old and new batteries or those of different types at the same time;
- In case the batteries run down, remove them from the toy;
- The power terminals shall never encounter short circuit.
- Due to the strong power and the inertia, when running at high speed, the car should not encounter emergency braking. Please pay extra attention when using the product.
- Decline of speed indicates low battery power. Please charge the product according to the above-mentioned method.
- When the battery of the remote control is low and the power indicator light flashes quickly or turns off, replace the batteries with new ones.
- On charge, please make sure the charging plug and the charging interface are properly connected.
- When not in use for a long time, please remove the batteries from the remote control and shut down the power switch to the "OFF" position.
- Adult's guidance is required when unpacking the product.
- Keep the information for reference.

